



## Craftsman Fixed (CF) Installation Instructions

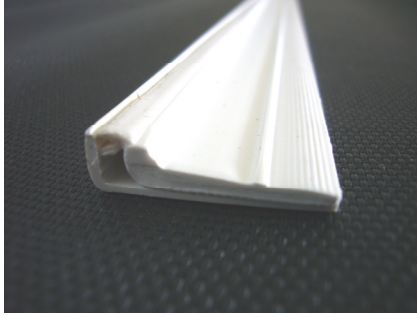

GripFix profile

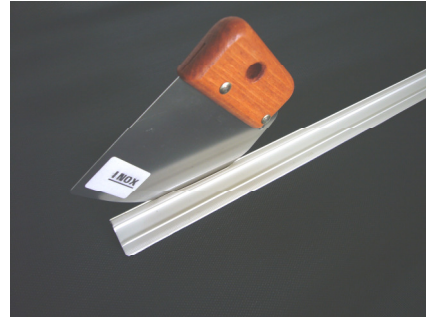


GripFix profile & inserted spatula

1° Cut the GripFix profile at desired length. Each side can be made of more than one bit, just be careful of the alignment.

2° Fix the Gripfix profile to a solid support. You can screw it, staple or nail it, or even glue it with contact-type strong glue. The fixing groove should be internal to the total frame you are building.

3° Insert the black backing fabric into the groove of the Gripfix profile with the provided spatula. Start by the middle of the four sides (the large sides first), and then progress towards the corners. It is safer to perceive the insertion angle by simply inserting the tool once in the profile without the fabric. Then remove it, place the fabric over the profile and insert it inside, and then proceed. Check that the black backing is properly tensioned. If it is not, then repeat the gesture with the spatula to push the fabric deeper into the groove.

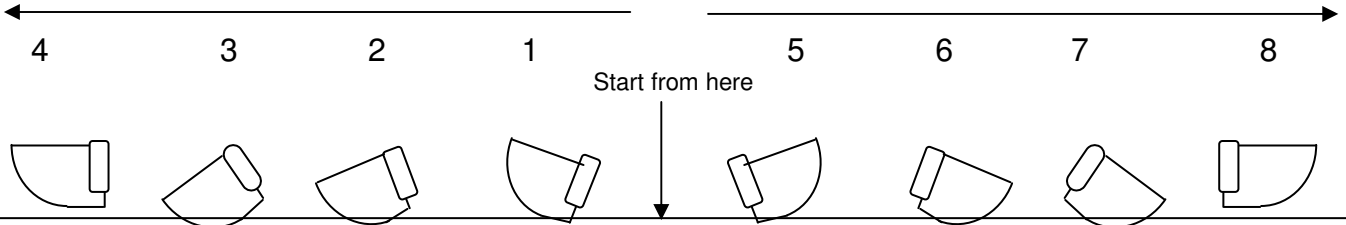

4° Insert the Enlightor fabric into the groove of the white Gripfix profile. Be careful never to fold this fabric. It can only be rolled.

5° Check that the tension is sufficiently uniform to avoid uneven bending of the screen frame. It must be sufficient to avoid any wave or wrinkle.

6° Once the white fabric is stretched, check the evenness of the surface. If the frame warps, the tension is excessive. In this case, release locally the fabric from the profile, and insert it again.

7° If the Enlightor is not tight enough in some places, repeat the gesture to push it deeper inside the groove

8° Cut any fabric in excess of more than 1/2" external to the groove. Use preferably scissors for the black backing and a cutter with a new blade for the Enlightor fabric.

### Note:

- Before inserting the fabric in the profile groove, apply a very slight tension. The progressive insertion into the groove will significantly increase this tension.
- To insert the tool in the profile, start from the small straight edge, then gently push the fabric inside the by a rotation movement along the curved edge. Once you have reached the end of the curved edge, take the tool out of the profile and start again.