



U.See Ltd. Unit 136
Bentwaters Parks, "The Airfield"
IP12 2TW Rendlesham, Suffolk.
U.K.
Tel :+44 (o) 1 394 420 220
www.screenexcellence.com


PF ASSEMBLING INSTRUCTIONS

1° Place the component parts on a flat surface



2° Place the protective sheet on a wide, clean surface sensibly larger than the complete screen. Place the 4 main extruded profiles on the protective sheet. The black velour side must be face down.


Insert the 12 angle brackets in the provided channels of the profiles extrusions, that is 3 per angle

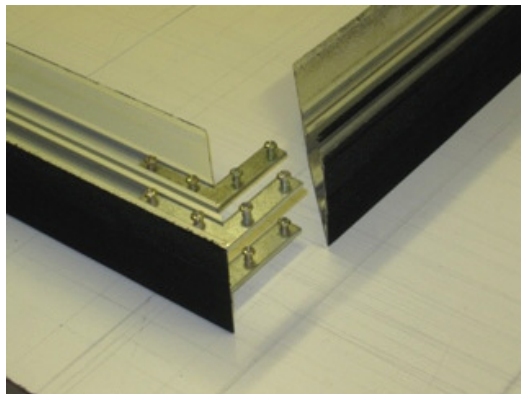



Then adjust the 4 angles so as not to leave any space at the mitre junctions




U.See Ltd. Unit 136
Bentwaters Parks, "The Airfield"
IP12 2TW Rendlesham, Suffolk.
U.K.
Tel :+44 (o) 1 394 420 220
www.screenexcellence.com

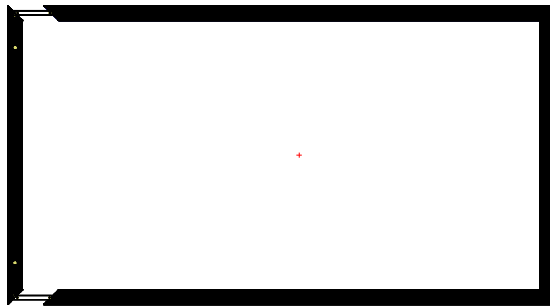

3° Tighten with the provided screws

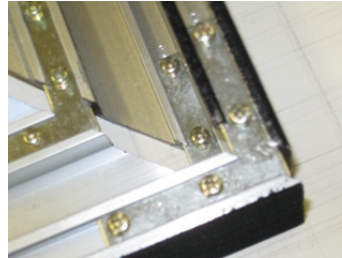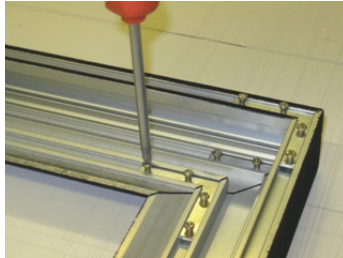

4° Check the overall appearance of the frame

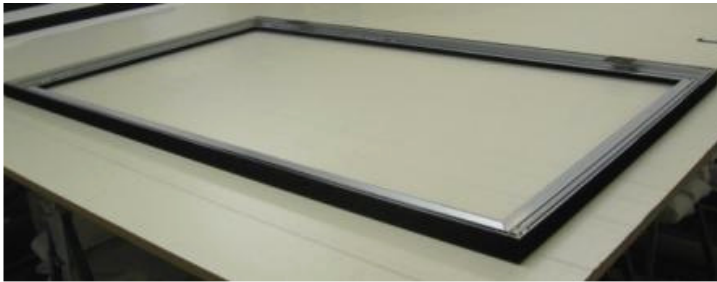

5° Place the fabric inside the frame






U.See Ltd. Unit 136
Bentwaters Parks, "The Airfield"
IP12 2TW Rendlesham, Suffolk.
U.K.
Tel :+44 (o) 1 394 420 220
www.screenexcellence.com



6° Insert 4 steel rods in the fabric hems



8° Attach the spring hooks through the fabric holes to the steel rods...

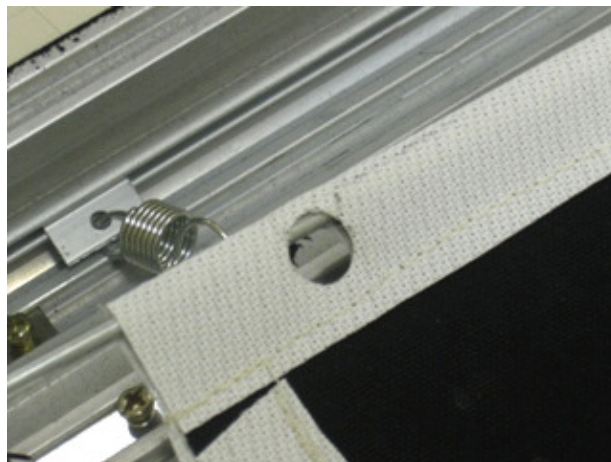



U.See Ltd. Unit 136
Bentwaters Parks, "The Airfield"
IP12 2TW Rendlesham, Suffolk.
U.K.
Tel :+44 (o) 1 394 420 220
www.screenexcellence.com



9° With the help of the provided hook



10° screw the wall fixing brackets on the upper profile with a suitable spacing



11° Fix the complete assembly onto two screw heads protruding from the wall

Note: the adhesive logo is provided separately. Please stick it at the centre bottom of the lower



U.See Ltd. Unit 136
Bentwaters Parks, "The Airfield"
IP12 2TW Rendlesham, Suffolk.
U.K.
Tel :+44 (o) 1 394 420 220
www.screenexcellence.com

horizontal element.